COOKTOP PARTS

For Models:GR450LXHQ2, GR450LXHB2, GR450LXHT2
(White) (Black) (Designer Biscuit)

30" ELECTRIC RANGE
CERAN COOKTOP
Convection Oven

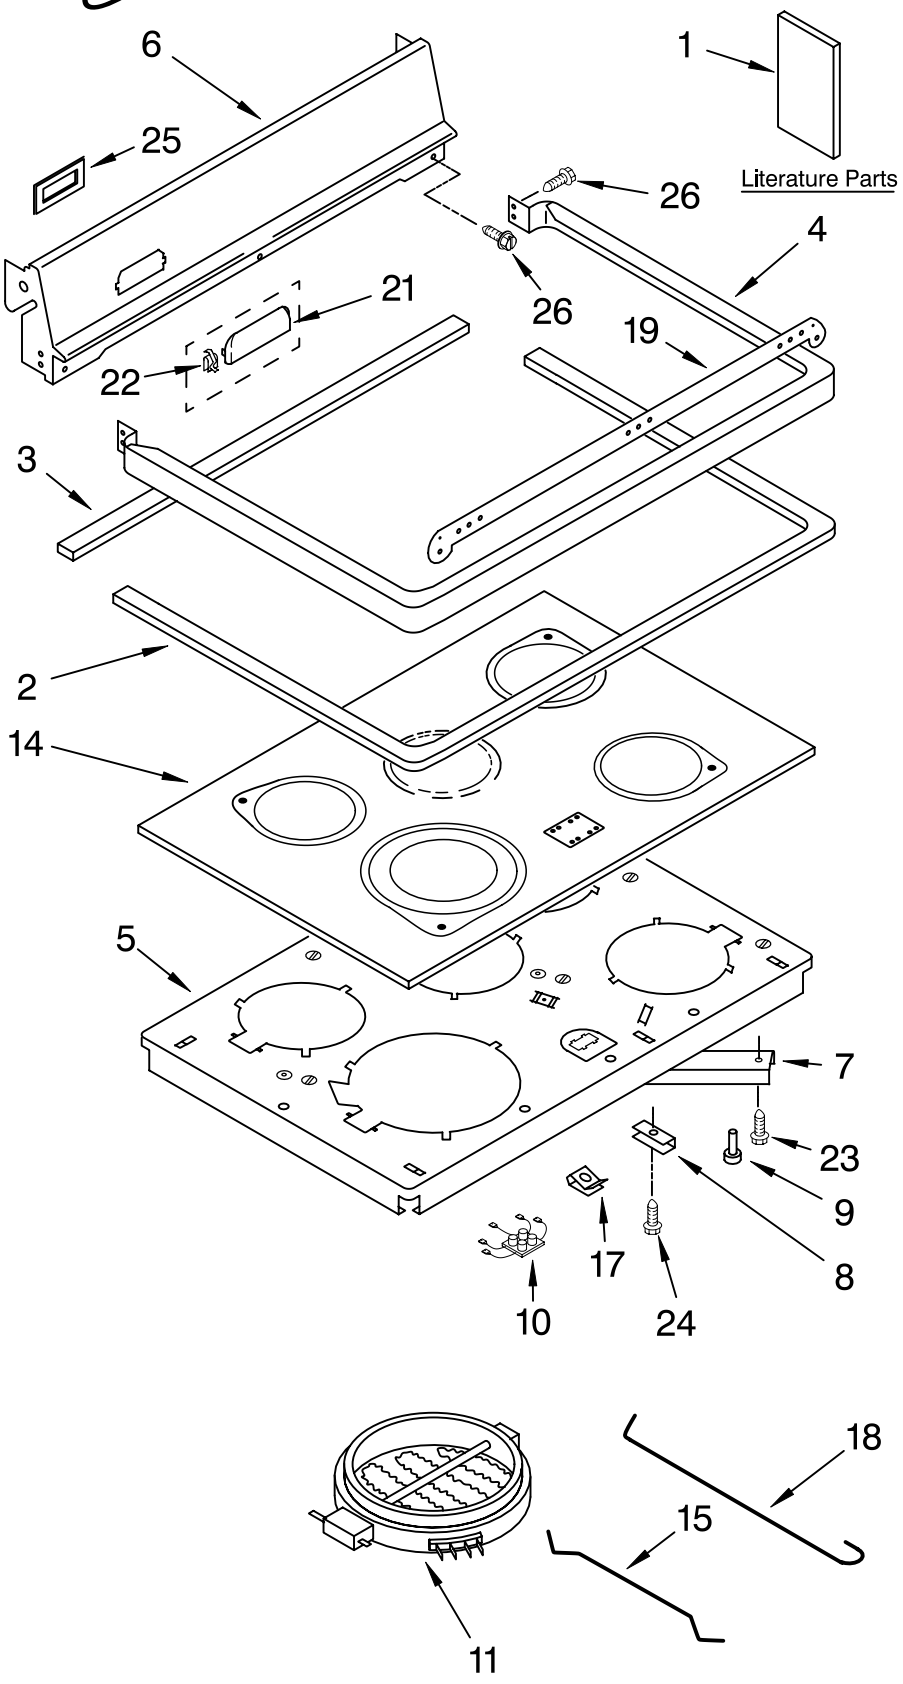

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT9754119	Installation Instructions
	LIT9752776	Template, Anti−Tip
	LIT9782236	Wiring Diagram
	LIT9782189	Use & Care Guide
	LIT3191638	Safer Cooking Tips
2	9780939	Gasket, Cooktop Front & Sides
3	9781614	Rear Gasket
4		Frame, Cooktop
	9750456PW	White
	9750456PB	Black
	9750456PC	Biscuit
5	9753674	Support, Element
6		Back Splash
	9752337GW	White
	9752337GB	Black
	9752337GC	Biscuit
7	9753675	Brace, Support
8	9753691	Support Clips (4)
9	9750969	Bumper−White (4)
10	9781935	Hot Light
11		Element, Surface
	8272564	1500W − RR
	8272563	1000/2400W − LF
	8272566	1800W − LR−RF
	9754274	Warm Zone
14		Cooktop, Ceran
	9754088CW	White
	9754088CB	Black
	9754088CC	Biscuit
15	9781460	Rod, Small Ceran Element
17	9781235	Speed Nut
18	9781459	Rod, Large Ceran Element
19	9780585	Wire Guard
21		Cover, Vent
	9753040CW	White
	9753040CB	Black
	9753040CC	Biscuit
22	3149190	Clip, Vent Cover
23	9780272	Screw
24	423248	Screw
25	9750767	Gasket
26	3149333	Screw
	9753677	Spring, Warm Zone Element

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models:GR450LXHQ2, GR450LXHB2, GR450LXHT2
(White) (Black) (Designer Biscuit)

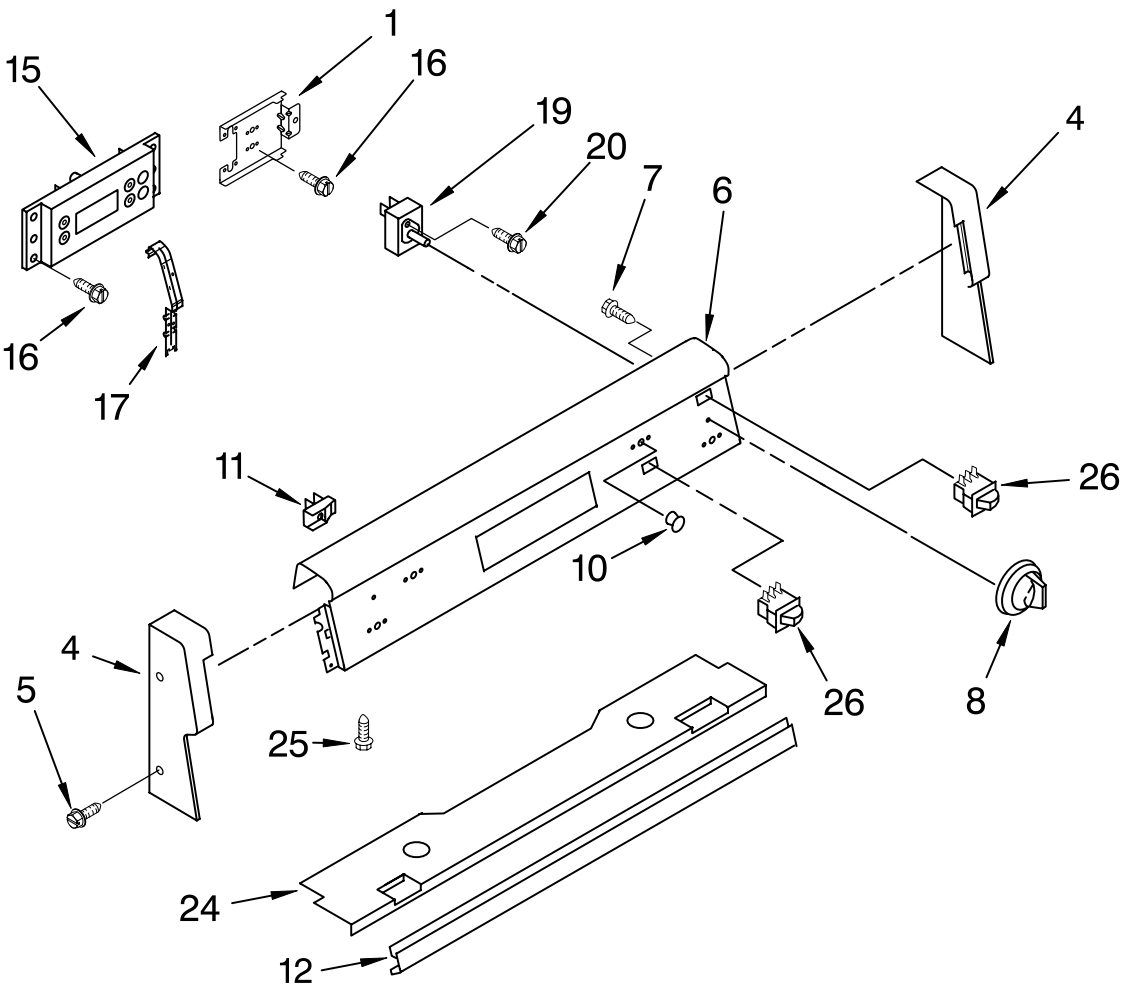

Illus. No.	Part No.	DESCRIPTION
1	9781881	Bracket, Timer
4		End Cap
		Left Hand
	9752422FW	White
	9752422FB	Black
	9752422FC	Biscuit
		Right Hand
	9752423FW	White
	9752423FB	Black
	9752423FC	Biscuit
5	9780265	Screw, 10−16 x 3/8
6		Panel, Control
	9754089PW	White
	9754089PB	Black
	9754089PC	Biscuit
7	9780852	Screw, 8−18 x 3/8
8		Knobs, Control
	9752405FW	White
	9752405FB	Black
	9752405FC	Biscuit
10	9752589	Lens, Indicator
11	313102	Light Indicator
12		Trim Strip
	9752440PW	White
	9752440PB	Black
	9752440PC	Biscuit
15		Timer
	9782087CW	White
	9782087CB	Black
	9782087CC	Biscuit
16	9780272	Screw, 10−16 x 1/2
17	9781754	Bracket, Timer
19		Infinite Switch
	9750638	1500W
	9750639	1800W (2)
	9755173	Dual
20	3400816	Screw, 8−32 x 3/16
24	9752439	Base, Console
25	3196168	Screw, 8−18 x 1/2
26		Switch, Rocker
		Illuminated
	9753692FW	White
	9753692FB	Black
	9753692FC	Biscuit
		On/Off
	9753261FW	White
	9753261FB	Black
	9753261FC	Biscuit
	9754008	Insulation, Control

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Models:GR450LXHQ2, GR450LXHB2, GR450LXHT2

(White) (Black) (Designer Biscuit)

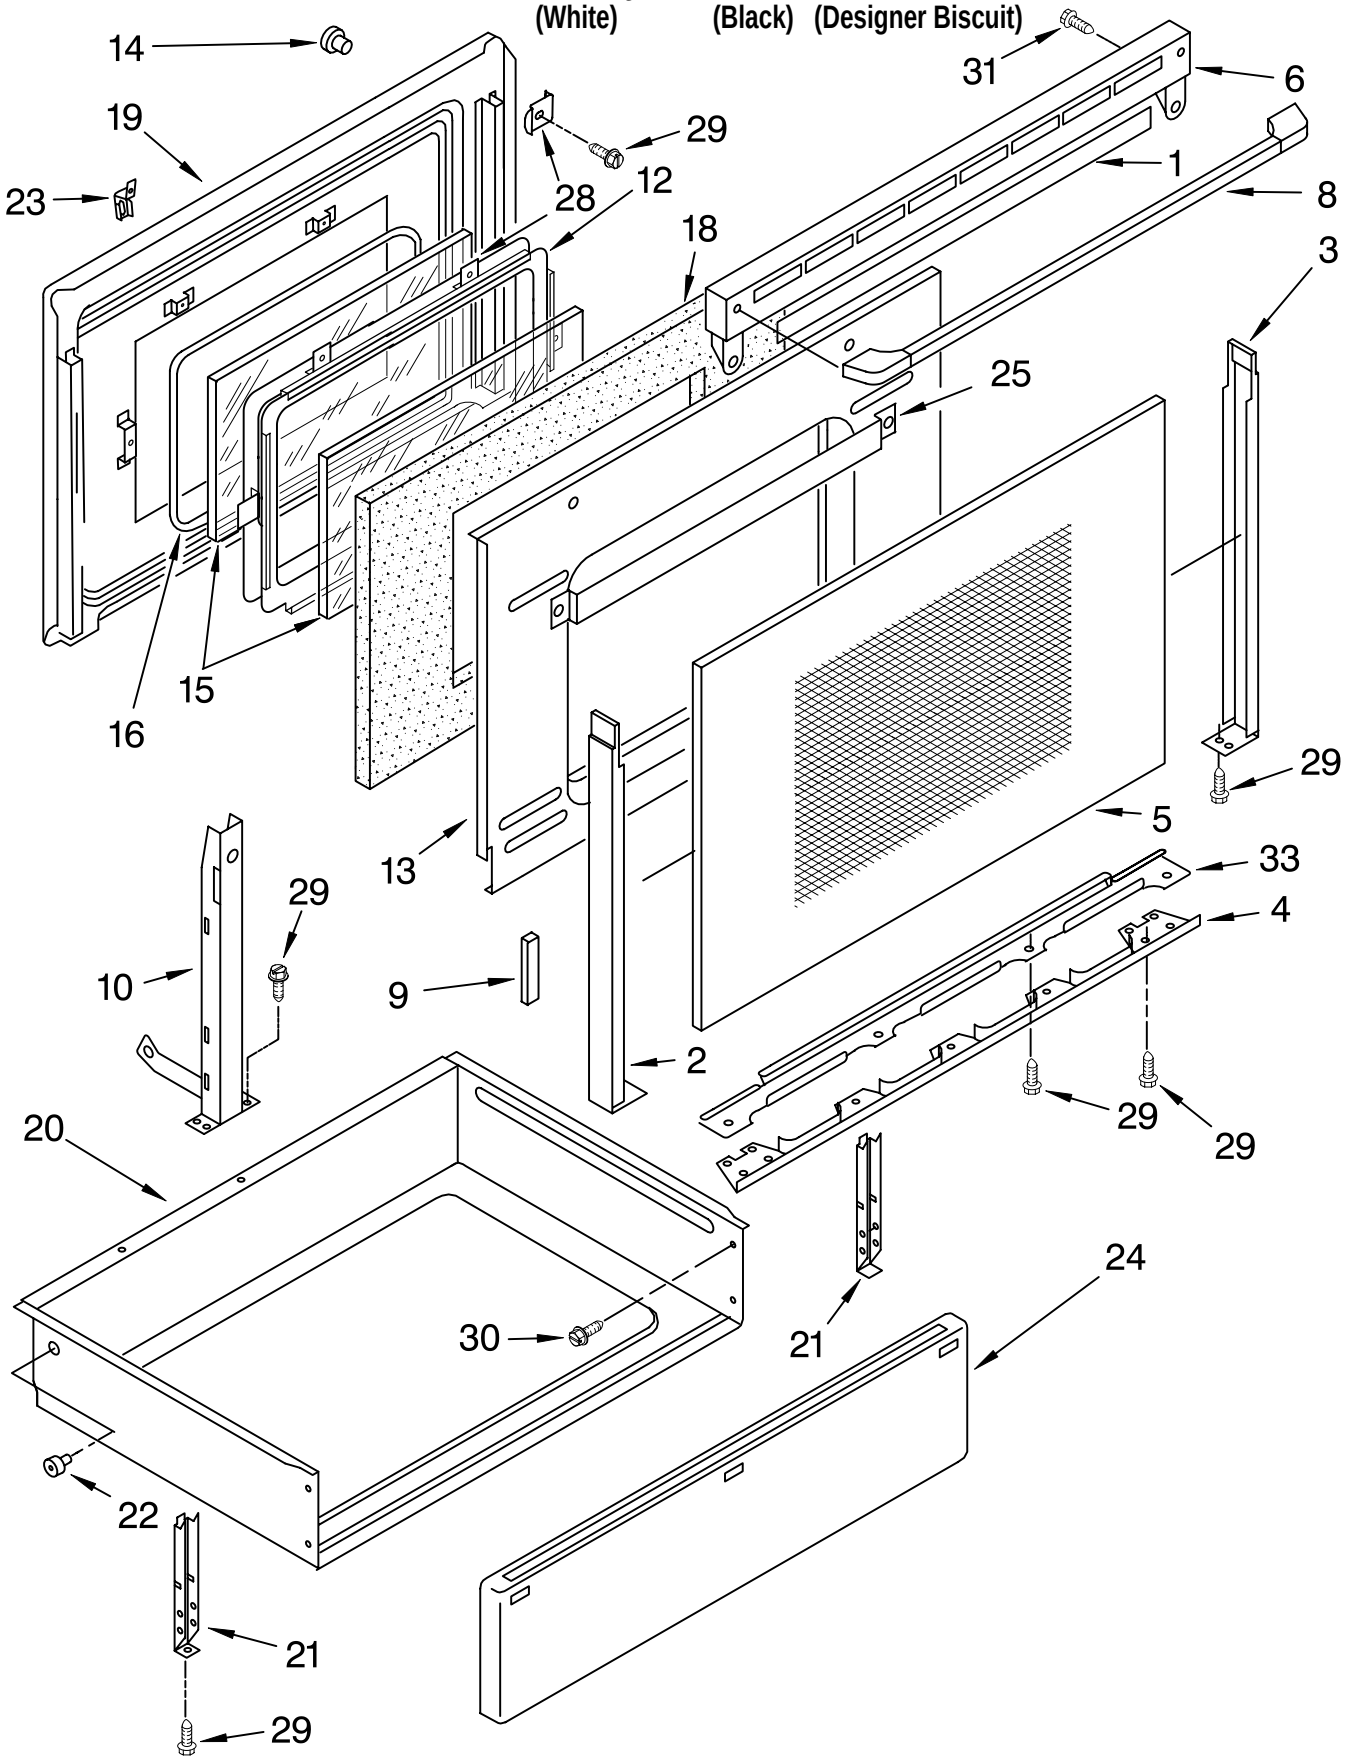

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Models:GR450LXHQ2, GR450LXHB2, GR450LXHT2
(White) (Black) (Designer Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	9781659	Gasket,Door Vent
2		Trim, Door−Left
	9782003PW	White
	9782003PB	Black
	9782003PC	Biscuit
3		Trim, Door−Right
	9782004PW	White
	9782004PB	Black
	9782004PC	Biscuit
4		Trim, Door Bottom
	9781209PW	White
	9781209PB	Black
	9781209PC	Biscuit
5		Glass, Door Front
	9781694PW	White
	9781694PB	Black
	9781694PC	Biscuit
6		Vent, Door
	9753498GW	White
	9753498GB	Black
	9753498GC	Biscuit
8		Handle, Door
	9752701PW	White
	9752701PB	Black
	9752701PC	Biscuit
9	9781449	Gasket, Door Glass
10	9782033	Hinge, Door R or L
12	9781602	Frame, Window
13	9781586	Shield, Door
14	9780771	Bumper, Door
15	9781593	Glass, Pyro (2)
16	9755177	Seal, Window
18	9754006	Insulation, Door
19	9781600GM	Liner, Door
20	9780583	Drawer & Roller
21	9750169	Bracket, Drawer
22	422604	Roller, Drawer
23	9750676	Retainer, Door
24		Front, Drawer
	9782108PW	White
	9782108PB	Black
	9782108PC	Biscuit
25	9750693	Heat Channel
	90296	Clip
28	9781502	Spacer, Door (9)
29	9780265	Screw
30	9780272	Screw
31	9781072	Screw
33	9781771	Deflector,Steam

OVEN CHASSIS PARTS

For Models:GR450LXHQ2, GR450LXHB2, GR450LXHT2

(White) (Black) (Designer Biscuit)

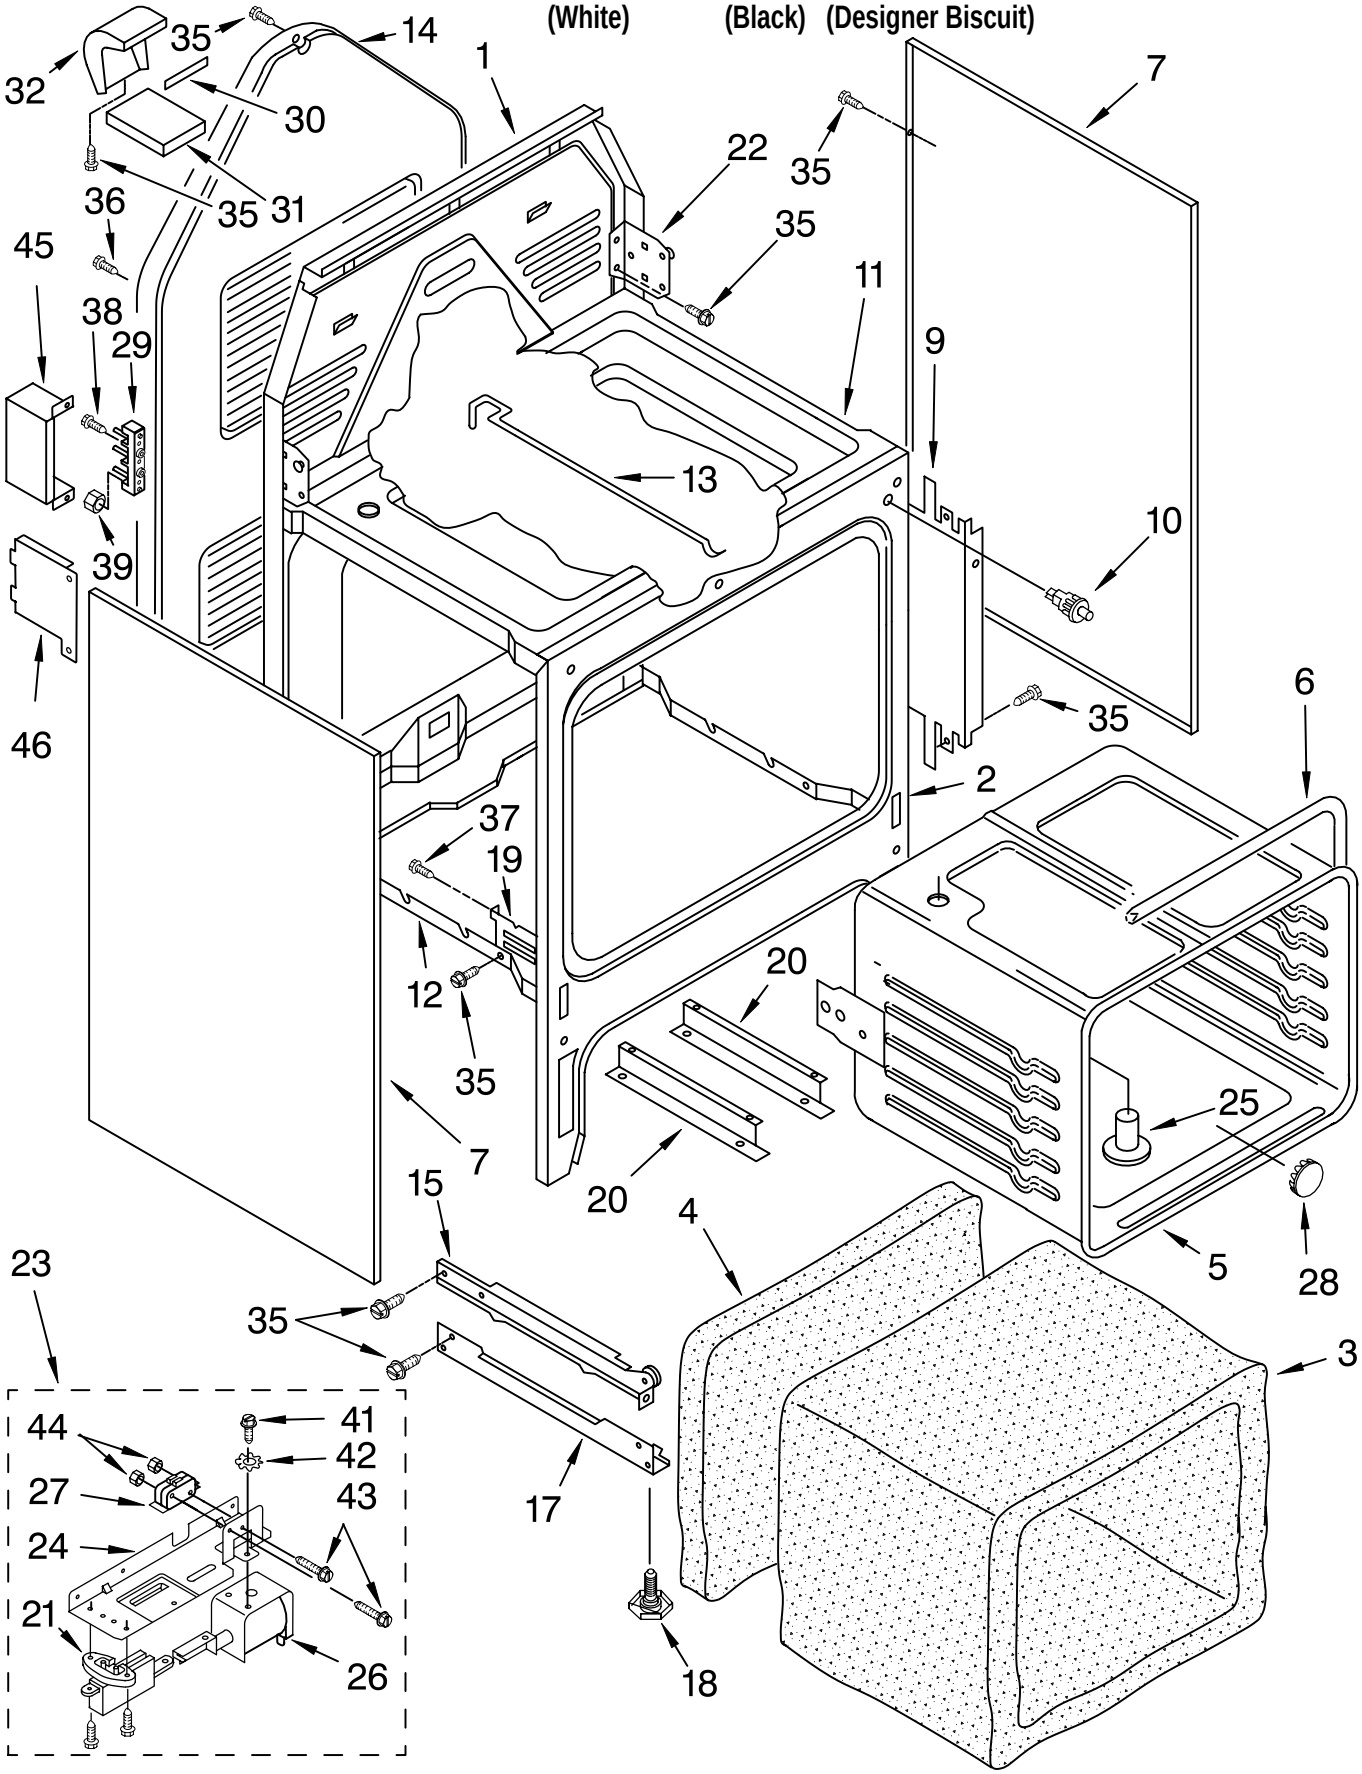

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN CHASSIS PARTS

For Models:GR450LXHQ2, GR450LXHB2, GR450LXHT2
(White) (Black) (Designer Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	9750146	Main Chassis, Back
2	9750514GM	Chassis, Front
3	9754000	Insulation, Wrap
4	9754011	Insulation, Rear
5	9754249GM	Oven Liner
6	9755179	Gasket Oven
7		Oven, Side Panel
	9781907PW	White
	9781907PB	Black
	9781907PC	Biscuit
9	9780664	Shield, Insulation
10	9781580	Door Switch (Oven Light)
11	9750478	Burner Box
12	9750142	Oven Bottom
13	9750523	Rod, Lock
14	9750150	Panel, Rear
15	9750223	Drawer Rail, Left
	9750224	Drawer Rail, Right
17	9750147	Bottom Rail (2)
18	312701	Foot, (4)
19	9782005	Receiver, Hinge (R or L)
20	9781904	Support Rail
21	9752462	Single Position Device (Not Serviced)
22	9750258	Hinge, Cktp.−Left
	9750416	Hinge, Cktp.−Right
23	9752404	Oven Lock Assembly (Includes #21)
24	9750526	Bracket, Lock
25	9753091	Vent Tube
26	9752409	Solenoid
27	9750965	Switch, Interlock
28	9780578	Plug, Button
29	258076	Block, Terminal
30	9750767	Gasket, Vent
31	9750393	Cover, Vent
32	9750394	Cover, Back
35	9780265	Screw
36	9780275	Screw
37	9780272	Screw
38	98884	Screw
39	112432	Nut
41	422222	Screw
42	424238	Washer
43	9750887	Screw
44	9750888	Nut
45	9752344	Box, Terminal
46	9752345	Cover, Ternminal Box

OVEN PARTS

For Models:GR450LXHQ2, GR450LXHB2, GR450LXHT2
(White) (Black) (Designer Biscuit)

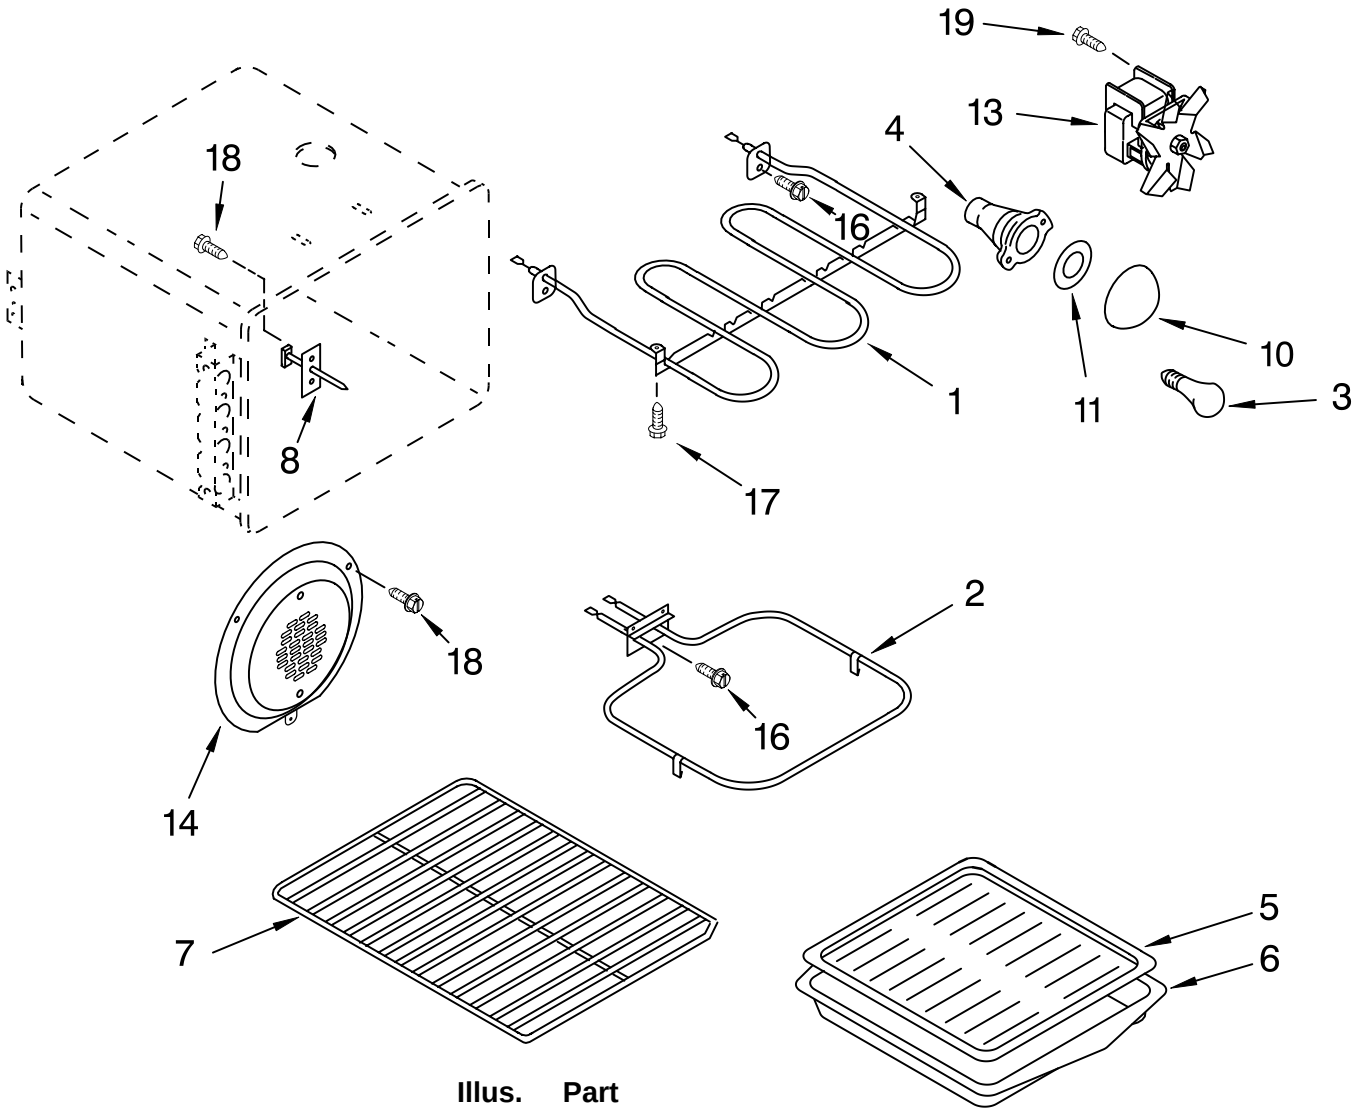

Illus. No.	Part No.	DESCRIPTION
1	9750211	Element, Broil
2	9750213	Element, Bake
3	8935	Bulb, Oven
4	9781050	Light Socket
5	420104GM	Grill, Broiler
6	420101GM	Pan, Broiler
7	9750823	Rack, Standard (3)
8	9782081	Sensor
10	9781049	Lens, Light
11	3184533	Gasket, Lens
13	9781543	Fan Assembly
14	9751904GM	Baffle, Convection
16	9781509	Screw
17	340184	Screw
18	9780265	Screw
19	9780272	Screw

MISCELLANEOUS PARTS

For Models:GR450LXHQ2, GR450LXHB2, GR450LXHT2
(White) (Black) (Designer Biscuit)

Illus. No.	Part No.	DESCRIPTION

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150°c
242820	Wire, Black 14 Ga. 150°c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242829	Wire, Red 12 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242826	Wire, White 14 Ga. 150°c
242827	Wire, Yellow 14 Ga. 150°c
242832	Wire, Yellow 14 Ga. 200°c

PAINT, TOUCH−UP (1/2oz.)

72017	White
72107	Almond
511873	White Porcelain (2 Oz.)
4392899	Biscuit

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
285006	Superior Black
206922	Primer (White)
4392901	Biscuit

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)
4392900	Biscuit

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean (1/2 Pt.)
261582	Grease
814009	Glass Cleaner
9780196	Cleaning Creme

INSULATION

261514	Insulation, Fiberglass (1−1/2" x 24" x 120")
240132	Insulation, Fiberglass (2−1/2" x 22" x 120")
241430	Foil, Aluminum Oven (18" x 25')

WIRING HARNESS PARTS

9782131	Harness, Wire (Main)
9752771	Harness, Wire (Cooktop Control)
9753682	Harness, Wire (Cooktop Ceran)
9750744	Harness, Wire Door Switch
9753687	Harness, Wire (Simmer)
3169573	Strap, Ground
690989	Screw, Grounding
313660	Clip, Ground Strap
9781930	Harness, Wire (Single Ceran)
20082084	Tie, Wire
9753680	Harness, Wire (KWZ)
9753687	Harness, Wire (Simmer)
9781903	Jumper, Wire (Bake/Broil)
9782182	Jumper, Wire (Dual Switch)